

## GE (V2) UNIVERSAL REMOTE INSTRUCTIONS

There are two methods to program your Universal Remote. Below you will find the instructions found in the manual, with notes to ensure that each step is performed correctly.

### Direct Code Entry (Recommended Method)

1. Locate the Remote Code List provided in this manual. Find the DEVICE CATEGORY you wish to program (for example TV, DVD, SAT, AUX) and then find the BRAND of that device. Circle all the codes under that brand. Example: For a GE TV, locate the TV code section then circle all of the GE TV codes.

**NOTE: Be sure that you are looking up the specific Device you want to control. For example: If you want to turn the TV on and off and make its volume increase and decrease, you will locate the code for your TV. (Even if your TV is connected to Cable or Satellite) If you subscribe to Cable or Satellite and use a set top box to control your channels you will want to use the appropriate Cable or Satellite codes (The TV Codes will not allow control of Cable or Satellite Receivers)**

2. Manually turn on the device you wish to control.
3. Press and hold the SETUP button until the red indicator light stays on (approximately 4 seconds) and then release the SETUP button.

**Note: Once the light is on solid, immediately release the Setup button.**

4. Press and release the desired device button on the remote (TV, DVD, SAT, AUX). The red indicator will blink once and then remain on.

**Note: the indicator blink referenced in this step will occur immediately when pressing down the button.**

5. Enter the first 4-digit code previously found in the code list using the number buttons on the remote. If the code entered is a valid code, the red indicator light will turn off. If the code entered is not a valid code, the red indicator light will flash and remain on allowing you to re-enter the code.

**Note: Be methodical with each button press during this step. For example: If you have a code such as 5007, when pressing each number key, press firmly down and completely release the button to ensure each number has been registered before moving to the next number.**

6. Point the remote at the device. Press the POWER button—if the device turns off, no further programming is required for that device. If the device does not turn off, return to step 3 and use the next code found in the code list. Continue this process until a code for your device is found.

**Note: When the Device turns off, press the power button again to turn it back on and try other functions to ensure functionality. If the remote performs all the functions you wish to use, you are then finished. If the remote does not perform all functions, move back to Step 3 and try all remaining available remotes codes.**

7. Repeat this process for each device (for example TV, DVD, SAT, AUX) in your home entertainment system you wish to control. Four devices can be programmed.

**Note: Only the codes included in your User's Manual will program the remote using Direct Code Entry. Use of another Brands Codes will not provide additional functionality. If none of the provided codes operate your device, please continue to the Auto Code Search Method.**

### **Auto Code Search Method.**

1. Manually turn on the device you wish to control.
2. Press and hold the SETUP button until the red indicator light stays on (approximately 4 seconds) and then release the button.  
**Note: Once the light is on solid, immediately release the Setup button.**
3. Press and release the desired device button on the remote (TV, DVD, SAT, AUX). The red indicator will blink once and then remain on.  
**Note: the indicator blink referenced in this step will occur immediately when pressing down the button.**
4. Point the remote at the device and press and release the POWER button (for TV) or PLAY button (for DVD, VCR, etc.) to start the search. The red indicator will flash (approximately every 2 seconds) as the remote searches.  
**Note: The remote must be pointed at the device for the duration of this search.**
5. Place your finger on the #1 button so you are prepared to lock-in the code.
6. When the device shuts off or begins playing, press the #1 button to lock-in the code. The red indicator light will turn off. (You have approximately two seconds after the device shuts off or begins playing to lock-in the code.)  
**Note: The remote is searching through all available codes in its database and any other devices (DVD/Blu-Ray Players, VCRs, etc.) may react while performing this step. Do not press the #1 key until specifically the desired device turns off. For example: If you are trying to program your TV, while the remote is moving through its code list your DVD may turn on/off. Do not press the #1 key until the TV reacts.**
7. Point the remote at the device and check to see if the remote operates the device as desired. If it does, no further programming is required for that device. If it does not, return to step 2 and start the auto search again.  
**Note: The remote will start again from the last code it tried when locking in, so if you need to start the search again, it will pick up where it last left off.**

If you need further assistance, and would prefer to have a representative walk you through the programming process with you, we can be reached toll free at 1-800-654-8483 using option 1. We are available Monday – Friday, 8:00 a.m. – 5:00 p.m. CST.