

The following codes are for use with GE Universal Remotes purchased before August of 2002.

TELEVISION BRAND	TELEVISION CODES
Abex	172
Admiral	001, 173
Adventura	174
Aiko	016
Alleron	046
Amtron	038
Akai	002
Anam National	003, 038
AOC	004,005, 006, 007, 175, 176
Audiovox	038
Belcor	004
Bell & Howell	001, 083, 162
Bradford	038
Brokwood	004
Candle	004, 006, 008, 174
Capehart	175
Celebrity	002
Centurion	009
Citizen	004, 006, 008, 016, 038, 105, 171, 174, 177
Clairtone	176
Colortyme	004, 006
Concerto	004, 006
Contec/Cony	012, 013,014, 038, 176
Craig	038
Crown	038, 171
Curtis Mathes	000, 004, 006, 015, 105, 162, 171
CXC	038
Daewoo	004, 005, 006, 016, 017, 018, 127, 171
Daytron	004, 006, 171

Dimensia	000
Dumont	004, 151
Dynatech	178
Electroband	002, 176
Electrohome	003, 004, 006, 019, 022
Emerson	004, 006, 012, 014, 023, 024, 025, 026, 027, 028, 029, 030, 031, 032, 033, 034, 035, 036, 037, 038, 039, 041, 042, 043, 044, 046, 047, 123, 124, 162, 171, 176, 177, 179, 191
Envision	004, 006
Fisher	048, 049, 050, 051, 162, 180
Fujitsu	046
Funai	038, 046
Futuretec	038
GE	000, 003, 004, 006, 022, 052, 054, 055, 087, 164, 165, 166, 167, 168, 181
Gibraltar	004, 151
Goldstar	004, 005, 006, 012, 019, 056, 057, 058, 155, 156, 171, 172
Grundy	038, 046, 171
Hallmark	004, 006
Harvard	038
Hitachi	004, 006, 012, 013, 059, 060, 061, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 148, 150, 179
IMA	038
Infinity	062
Janeil	174
JBL	062
JCB	002
JC Penny	000, 004, 005, 006, 008, 022, 052, 054, 058, 063, 064, 072, 087, 105, 128, 171, 172, 181
Jensen	004, 006
JVC	012, 013, 054, 060, 065, 066, 067, 089, 157, 158, 159, 182
Kawasho	002, 004, 006
Kaypani	175
Kenwood	004, 006, 019
Kloss Novabeam	068, 069, 174, 183

KTV	038, 070, 171, 176, 177
Loewe	062
Logik	083
Luxman	004, 006
LXI	000, 006, 049, 062, 071, 072, 073, 162, 181
Megatron	006, 059
Magnavox	004, 006, 008, 019, 062, 068, 069, 074, 075, 076, 077, 088, 089, 130, 131, 132, 133, 134, 183, 184
Majestic	083
Marantz	004, 006, 062, 078
MEI	176
Memorex	001, 006, 082, 083, 162
MGA	004, 005, 006, 019, 022, 051, 079, 080, 082
Midland	054, 151, 171, 172, 181
Minutz	052
Mitsubishi	004, 005, 006, 019, 022, 051, 079, 080, 081, 082, 082, 125
Montgomery Ward	083
Motorola	003, 173
MTC	004, 005, 006, 105, 176, 178
Multitech	038, 178
Multivision	084
NAD	006, 071, 072, 185
NEC	003, 004, 005, 006, 089
Nikko	006, 016
NTC	016
Onwa	038
Optimus	185
Optonica	095, 173
Orion	035, 191
Panasonic	003, 054, 062, 170
Philco	003, 004, 005, 006, 008, 012, 019, 062, 068, 069, 074, 075, 077, 183, 184
Philips	003, 004, 008, 012, 019, 046, 047, 062, 068, 069, 074, 075, 076, 086, 087, 088, 089

Pilot	004, 171
Pioneer	004, 006, 090, 091, 092, 179, 185
Portland	004, 005, 006, 016, 171
Price Club	105
Prism	054
ProScan	000, 181
Proton	004, 006, 012, 093, 175
Pulsar	151
Pulser	004
Quasar	003, 054, 070, 094
Radio Shack/Realistic	000, 004, 006, 012, 038, 049, 095, 162, 171, 172
RCA	000, 003, 004, 005, 006, 007, 019, 096, 098, 099, 100, 101, 102, 103, 129, 179, 181, 187, 188, 190
Rhapsody	176
Runco	151
Sampo	004, 006, 171, 172, 175
Samsung	004, 005, 006, 012, 015, 017, 019, 104, 105, 106, 171, 172
Sansui	191
Samsux	171
Sanyo	004, 048, 049, 050, 080, 107, 108, 162, 169, 180
Scotch	006
Scott	004, 006, 012, 024, 035, 038, 046
Sears	000, 004, 006, 013, 019, 046, 048, 049, 050, 051, 066, 071, 072, 109, 110, 162, 180, 181, 189
Sharp	004, 006, 012, 029, 095, 111, 112, 113, 122, 171, 173
Shogun	004
Signature	001, 083, 115
Simpson	008
Sonic	176
Sony	002
Soundesign	004, 006, 008, 038, 046
Squareview	189
SSS	004, 038
Starlite	038
Supre-Macy	174

Supreme	002
Sylvania	004, 006, 008, 019, 062, 068, 069, 074, 075, 076, 077, 088, 116, 161, 183, 184
Symphonic	033, 038, 189
Tandy	173
Tatung	003, 178
Technics	054
Techwood	004, 006, 054
Teknika	004, 005, 006, 008, 012, 013, 016, 038, 046, 076, 082, 083, 105, 170, 171
Telecaption	117
Tera	186
TMK	004, 006
Toshiba	049, 071, 072, 089, 105, 109, 117, 118, 160, 162
Totevision	171
Universal	052, 087
Victor	066, 182
Vidtech	004, 005, 006
Viking	174
Wards	000, 001, 004, 005, 006, 019, 024, 033, 046, 052, 062, 068, 069, 074, 075, 076, 083, 087, 088, 095, 119, 120, 184
Yamaha	004, 005, 006, 019
Zenith	083, 151, 152, 153, 154
CABLE BOX BRAND	CABLE BOX CODES
ABC	001, 002, 003, 004, 005, 006, 007
Antronix	008, 009
Archer	008, 009, 010, 011
Cabletenna	008
Cableview	008
Century	011
Citizen	011
Colour Voice	012, 013
Comtronics	014, 015
Contec	016

Eastern	017
Garrard	011
GC Electronics	009
Gemini	018, 019, 049
General Instrument	003
Hamlin	020, 021, 022, 035, 045
Hitachi	003
Hytex	002
Instant Replay	021
Jasco	011
Jerrold	001, 003, 005, 007, 018, 023, 024, 046
Magnavox	025
Memorex	026
Movie Time	002, 027
NSC	002, 027
Oak	002, 016, 029
Panasonic	000, 048
Paragon	026
Philips	011, 012, 013, 019, 025, 030, 031, 032
Pioneer	033, 034
Pulsar	026
RCA	000, 047, 049
Realistic	009, 049
Regal	022, 035,
Regency	017
Rembrandt	003
Runco	026
Samsung	014, 034
Scientific Atlanta	006, 036, 037, 038
Signal	014, 018
Signature	003
SI Marx	014
Sprucer	000
Starcom	001, 007, 018

Stargate	014, 018
Starquest	018
Tandy	040
Toshiba	026
Tusa	018
TV86	027
Unika	008, 009, 011
United Artists	002
United Cable	001
Universal	008, 009, 010, 011
Videoway	044
Viewstar	015, 025, 027, 040
Zenith	026, 050, 051
DVD PLAYER BRANDS	DVD PLAYER CODES
JVC	161
Magnavox	162
Mitsubishi	163
Philips	162
Pioneer	165
ProScan	160
Sony	166
RCA	160
Toshiba	167
VCR BRAND	VCR CODES
Admiral	001
Adventura	026
Aiko	027
Aiwa	002, 026
Akai	003, 004, 005, 007, 008
American High	021
Asha	013
Audio Dynamics	009, 010
Audiovox	014
Bell & Howell	011
Beaumarck	013
Broksonic	012, 025

Calix	014
Candle	013, 014, 015, 016, 017, 018, 019
Canon	021, 022, 114
Capehart	020, 110
Carver	062
CCE	027, 061
Citizen	013, 014, 015, 016, 017, 018, 019, 027
Colortyme	009
Colt	061
Craig	013, 014, 023, 061
Curtis Mathes	000, 002, 009, 013, 016, 018, 021, 022, 024, 115
Cybernex	013
Daewoo	015, 017, 019, 025, 026, 027, 028, 110
Daytron	110
DBX	009, 010
Dimensia	000
Dynatech	002, 026
Electrohome	014, 029
Electroponic	014
Emerson	002, 014, 015, 021, 024, 025, 026, 029, 030, 032, 033, 034, 035, 036, 037, 038, 039, 040, 041, 042, 044, 045, 047, 065, 105, 113, 116, 117, 130
Fisher	011, 023, 048, 049, 050, 051, 052, 118
Fuji	021, 119
Funai	002, 026
Garrard	026
GE	000, 013, 021, 022, 053, 115, 120
Goldstar	004, 005, 006, 012, 019, 056, 057, 058, 155, 156, 171, 172
Gradiente	026
Harley Davidson	026
Harman Kardon	009
Harwood	061
Headquarter	011
Hitachi	002, 055, 056, 057, 107, 111, 120, 122
HI-Q	023

Instant Replay	021
JCL	021
JC Penny	009, 010, 011, 013, 014, 021, 022, 055, 056, 058, 059, 060, 107, 118
Jensen	111
JVC	009, 010, 011, 018, 058, 111, 123
Kenwood	009, 010, 011, 016, 018, 058, 111, 123
KLH	061
Kodak	014, 021
Lloyd	002, 026
Logik	061
LXI	014
Megatron	006, 059
Magnavox	021, 022, 062, 063, 104, 108, 124
Magnin	013
Marantz	009, 010, 011, 016, 018, 021, 058, 062, 064
Marta	014
Masushita	021
MEI	021
Memorex	001, 002, 011, 013, 014, 021, 023, 026, 104
MGA	029, 065, 113
MGN Technology	013
Midland	053
Minolta	055, 056, 107
Mitsubishi	029, 055, 056, 065, 066, 067, 069, 070, 071, 072, 073, 074, 106, 113, 123
Montgomery Ward	001, 075
Motorola	001.021
MTC	002, 013, 026
Multitech	002, 013, 026, 053, 061
NEC	009, 010, 011, 016, 018, 058, 064, 076, 078, 079, 111, 123
Nikko	014
Noblex	013
Olympus	021
Optimus	001, 014

Optonica	096
Panasonic	021, 022, 109, 125, 126, 127
Pentax	016, 055, 056, 016, 107, 120
Pentax Research	018
Philco	021, 022, 062, 063
Philips	021, 062, 096, 124
Pilot	014
Pioneer	010, 055, 080, 081, 123
Portland	016, 017, 019, 110
ProScan	000
Protec	061
Pulsar	104
Quarter	011
Quartz	011
Quasar	021, 022, 125
Radio Shack/Realistic	001, 002, 011, 013, 014, 021, 022, 023, 026, 029, 049, 050, 096
RCA	000, 003, 013, 021, 055, 056, 082, 083, 084, 085, 086, 087, 088, 089, 090, 091, 107, 115, 120, 125
Radix	014
Randex	014
Ricoh	128
Runco	104
Samsung	005, 013, 015, 033, 053, 112
Sanky	001, 104
Sansui	010, 092, 111, 123
Sanyo	011, 013, 023
Scott	012, 015, 025, 032, 038, 065, 093, 116
Sears	011, 014, 021, 023, 048, 049, 050, 051, 055, 056, 107, 118
Sharp	001, 002, 017, 029, 094, 095, 096
Shintom	004, 056, 061, 098
Shogun	013
Signature	002
Singer	021, 061
Sony	004, 098, 099, 119, 128

STS	021, 107
Sylvania	002, 021, 022, 026, 062, 063, 065, 124
Sylvania	002, 021, 022, 026, 062, 063, 065, 124
Symphonic	002, 026
Tandy	002, 011
Tashiko	014
Tatung	058, 111
Teac	002, 026, 058, 085, 111
Technics	021, 109
Teknika	002, 014, 021, 100, 129, 026
Toshiba	015, 049, 051, 055, 065, 093, 116
Totevision	013, 014
TMK	013, 024, 047
Unitech	013
Vector Research	009, 010, 015, 016
Victor	010
Video Concepts	009, 010, 015, 016, 113
Videosonic	013
Wards	001, 002, 013, 014, 015, 021, 023, 026, 029, 055, 056, 061, 096, 101, 102, 103, 107, 116
XR-1000	021, 026, 061
Yamaha	009, 010, 011, 018, 058, 111
Zenith	004, 098, 104, 119, 128