

Save Code list for future reference Refer to the setup procedure below and look up the 4 digit code for your brand of TV, DVD, etc., from the list below. Refer to the Owner’s Manual for your remote for more information.

TV including LCD, Plasma, and Panel

ABEX	0185	CURTIS MATHES	0031 0105 0130	HYUNDAI	1134	MITSUBISHI	0005 0151 0051 0004
ACER	1163	DAEWOO ...	0130 0004 0009 0100 0005	ILO	0198 1070 1024 1023	MONIVISION	0009 0022 0141 0180
ACME	0016	0109 0358 0001 0015	0146 0189 1139 1113	0000 0012 0041 0042 0095
ADA	0006	CXC	0053 0042	IMA	0053	MONTGOMERY WARD	0031
ADC	0001 0010	CYBERVISION	0144	IN FOCUS	0000	0001 0000
ADMIRAL	0135 0020 0226 0001	DAEWOO ...	0130 0004 0009 0100 0005	INFINITY	0062 0288	MOTEGA	0049 1013
ADVENT	1171 0116 0167 0176 0922	0138 0043 0140 0039 0444 0080 0042	INITIAL	1070 0146 1085 1109	MOTOROLA	0020 0003
ADVENTURA	0174	0058 0017 0010 0126 0018 0127 0019	INSIGNIA	1181 1180 1175 1171	MTC	0004 0005 0009 0105 0109 0014
AIKO	0058	DAYTRON	0004 0009	0103 0189 0217 0135 0133 0116 0167	MULTITECH	0053
AIWA	0195 0196 0227 0269	DELL	0209 0028 0132	1148 0456 0029 0905 1406 1407 1408	MULTIVISION	0084
AKAI	0105 0002 0077 1137	DIAMOND VISION	0210 0948	INTEGRA	0181	MYRON & DAVIS	0212
ALLERON	0051	0092 0896	INTEQ	0121	NAD	0004 0009 0109 0185
AMARK	0020	DIGIMATE	1017	JANEIL	0174	NEC	1384 0181 0004 0005
AMTRON	0053	DIGISTAR	1019 0165 0118 0116	JBL	0062	0009 0003 0010 0095 0141
ANAM NATIONAL	0053 0003	0167 0132 1020 1151 1152	JC PENNEY	0031 0004 0005 0009	NET TV	0046 0124
.....	0025 0042 0193	DIMENSIA	0031 0000	0105 0107 0109 0054 0000 0087	NEXSTECH	1052 0167
AOC	0004 0005 0009 1009	DISNEY	0158 0135	0008 0012 0015 0022 0030 0052	NIKEI	0042
.....	0014 0156 0175 0187	DUKANE	0059 0072	0000 0012 0015 0022 0030 0052	NIKKO	0004 0009 0058
APEX	0214 0216 0215 1132 0401	DUMONT	0121 0004	ELECTROBAND	0002 0014	NIKTO	0105
ARCHER	0020	DURABRAND	0133 0189 0135	ELECTROHOME	0004 0009	NORCENT	0216 0043 0056
ASPECT	0059	0153 0217 0157 1135	0003 0022	NTC	0058
AUDIOVOX	1164 1165	0042	ELEKTRA	0001	OLEVIA	1027 1012 1140 1142 1156
.....	0053 1019 1117	ELITE VIDEO	0197	ELEMENT	1025 1173	ONCOMMAND	0201 1161
AXION	0177	EMERSON	1172 0004 0009 0044	1025 1173	ONKING	1167 1132 0149
BANG & OLUFSEN	0190	0135 0049 0051 0189 0053 0147	1025 1173	ONWA	0053 0042
BELCOR	0004	0039 0130 0210 0227 0233 0265	1025 1173	OPTIMUS	0170 0185 0374 0381
BELL & HOWELL	0031 0049	0266 0310 0325 0456 0040 0041	1025 1173	OPTOMA	0053 0024 0035 0042
.....	0000 0001	0042 0021 0023 0024 0179 0405	1025 1173	OPTONICA	0020 0095
BENQ	0081 0083 0101 1150	0025 0027 0030 0032 0034 0035 0037	1025 1173	ORION	0121 0135 0035
BLUESKY	1155 0144	0009 0004 0009 0074 1009	1025 1173	PANASONIC	1182 0171 0148 0054
BRADFORD	0053	0039 0130 0210 0227 0233 0265	1025 1173	0170 0062 0374 0381
BROKSONIC	0147 0135	0266 0310 0325 0456 0040 0041	1025 1173	0437 0950 0003 0070
.....	0310 0394 0932	0042 0021 0023 0024 0179 0405	1025 1173	0062 0004 0005 0009 0183
BROKWOOD	0004	0025 0027 0030 0032 0034 0035 0037	1025 1173	0001 1158 0068 0075 0141 0003 0008
CANDLE	0004 0009 0174 0008	0009 0004 0009 0074 1009	1025 1173	0154 1174 0062 0204 0184
CAPEHART	0175	0049 0110 0268 0180 0012	1025 1173	0208 0205 0206 0207 0004 0189 0183
CCE	1153	0049 0110 0268 0180 0012	1025 1173	0199 0200 0081 1149 1154 0288 0456
CELEBRITY	0002	0049 0110 0268 0180 0012	1025 1173	0003 0008 0068 0075 0086 0087 0141
CELERA	0214	0049 0110 0268 0180 0012	1025 1173	0177 0168
CENTRIOS	0169	0049 0110 0268 0180 0012	1025 1173	0128 0013 0002
CENTURION	0009	0049 0110 0268 0180 0012	1025 1173	0071 0380 0152
CETRONIC	0042	0049 0110 0268 0180 0012	1025 1173	0004 0009 0051
CHANGHONG	0214 0401	0049 0110 0268 0180 0012	1025 1173	0053 0008 0042
CINERAL	0058 0144	0049 0110 0268 0180 0012	1025 1173	0245 0008 0068 0075 0141
CITIZEN	0004 0009 0053 0105 0109	0049 0110 0268 0180 0012	1025 1173	0009 0138 0130
.....	0189 0135 0001 0008 0042 0058	0049 0110 0268 0180 0012	1025 1173	0112 0079 0454
CLAIRTONE	0014	0049 0110 0268 0180 0012	1025 1173	0094
CLASSIC	0214 0401 0042	0049 0110 0268 0180 0012	1025 1173	0004 0005
COBY	1091 1124	0049 0110 0268 0180 0012	1025 1173	0004 0008
COLOR VOICE	0010	0049 0110 0268 0180 0012	1025 1173	0004 0008
COLORTYME	0004 0009 0010	0049 0110 0268 0180 0012	1025 1173	0004 0008
CONCERTO	0004 0009	0049 0110 0268 0180 0012	1025 1173	0004 0008
CONCIERGE	0121	0049 0110 0268 0180 0012	1025 1173	0004 0008
CONTEC	0053 0012 0014 0042	0049 0110 0268 0180 0012	1025 1173	0004 0008
CORNEA	0050	0049 0110 0268 0180 0012	1025 1173	0004 0008
CRAIG	0053 0042	0049 0110 0268 0180 0012	1025 1173	0004 0008
CROSLEY	0062	0049 0110 0268 0180 0012	1025 1173	0004 0008
CROWN	0053 0042	0049 0110 0268 0180 0012	1025 1173	0004 0008
CTX	0020	0049 0110 0268 0180 0012	1025 1173	0004 0008

RADIO SHACK	0031 0004 0048 0049	TEKNIKA	0031 0004 0005 0009
.....	0053 0170 0009 0027 0342	0051 0053 0105 0109 0107
.....	0000 0012 0041 0042 0095	0000 0174 0001 0008 0012 0042
RCA	0031 0004 0048 0054 0094 0100	TELECAPTION	0117
.....	0102 0107 0129 0191 0005 0009 0000	TELERENT	0031 0000 0001
.....	0162 0163 0342 0003 0015 0022 0096	TERA	0004 0186
.....	0113 0125 0179 0187 0188	TEVION	0198
REALISTIC	0031 0004 0048 0049	TMK	0004 0009
.....	0053 0170 0009 0000	TOSHIBA	0159 0178 0109 0120 0181
.....	0227 0012 0041 0042 0095	0105 0049 0095 0170 0260 0358
RHAPSODY	0014	0394 0924 0012 0095 0117 0141
RUNCO	0121 0181 0111	TRUTECH	1029 1145 1121
SAMPO	0124 0046 0004	UNIVERSAL	0052 0087
.....	0009 0175 0012	VENTURER	1183
SAMSUNG	0105 0077 0076 0109	VICTOR	0060
.....	0007 0009 0004 0005 0085 0172	VIDEOCON	1166
.....	0942 0358 0012 0015 0080 0104 0106	VIDTECH	0004 0005 0009
SAMSUX	0009	VIEWSONIC	1179 0046
SAMTRON	0105	0072 1014 1144
SANSUI	0135 0310 0394	VIKING	0174
SANTECA	0194	VIORE	1018
SANYO	0049 0097 0110 0004	VIZIO	1169 1168 0081
.....	0268 0012 0108 0180	0112 0143 1011 0050
SCEPTRE	1167 1132 0149	WARDS	0031 0062 0004 0005
SCOTCH	0004 0009	0009 0051 0000 0068 0075 0087
SCOTT	1139 0004 0009 0051	0095 0119 0052 0001 0008 0024
.....	0053 0024 0035 0042	WESTINGHOUSE	0002 0143
SEARS	0031 0062 0049 0051 0105	0114 1146
.....	0004 0009 0107 0109 0110 0189 0000	WHITE WESTINGHOUSE	0100 0130
.....	0112 0079 0394 0456 0112 0015 0180	0138 0136 1008 0227 0080
SELECTRON	1022 1020 1021	YAMAHA	0170 0004 0005 0009
SEMP	1001	ZENITH	0121 0009 0050 0078 0091
SHARP	0079 0123 0063 0020 0004	0138 0059 0131 0038 0111
.....	0009 0226 0266 0006 0095 0122	0134 0153 0064 0004 0135
SHOGUN	0004	0226 0227 0247 0266 0288 0310
SIGNATURE	0031 0000 0001 0023	0338 0358 0023 0039 0001 0058
SIMPSON	0008		
SONIC	0014		
SONY	0128 0013 0002		
.....	0071 0380 0152		
SOUNDESIGN	0004 0009 0051		
.....	0053 0008 0042		
SOVA	1003 1095		
SOYO	1130 1131		
SPECTRA	0210		
SPECTRAVISION	0203		
SQUAREVIEW	0189		
SSS	0004 0053 0042		
STAR SIGHT	0064		
STARLITE	0053		
SUPERSCAN	0112 0079 0456		
SUPERSONIC	0944		
SUPRA	0004 0082		
SUPREMACY	0174		
SUPREME	0002		
SVA	0216 0212		
SYLVANIA	0062 0004 0009 0135		
.....	0189 0183 1141 0227 0456		
.....	0008 0068 0075 0141 0161		
SYMPHONIC	0053 0189		
.....	0227 0456 0024		
SYNTAX	1027 1140 1142		
TANDY	0020		
TATUNG	0081 0198 0003		
TECHNICS	0054		
TECHWOOD	0004 0009 0054		

HDTV Set Top Boxes

CHARTER	0512
DIRECTV Models	1049 1766
.....	1767 1768 0621
GE HDSTB	1769
GO VIDEO HDT100	0610
HITACHI 61HDX98B	0632
HUGHES HIRD-E8	0607 0632 0641
HUGHES HTL-HD	0607 0632 0641
LG HTL-HD	0607 0632 0641
LG LSS-3200A	0607 0632 0641
MITSUBISHI SRHD400	0632
MITSUBISHI SRHD500	0632
MITSUBISHI SR-HD5	0632
MOTOROLA HDT100	0618
PHILIPS DSHD800R	0632
PIONEER SH-D505	0604
PROSCAN PSHD105	0636
RCA HD65W20	0658
RCA DTC-100	0636
RCA DTC-210	0636
RCA PSHD105	0636
SAMSUNG SIR-T165	0583
SAMSUNG SIR-T351	0583
SAMSUNG SIR-TS160	0619
SAMSUNG SIR-TS360	0619
SONY SATHD200	0623

SL MARX	0474	GENERAL INSTRUMENT (GI)	ZENITH	0617 0634 0656 0595
SPRUCER	0460 0627 (A) 0642 (B) 0643 (C) 0644 (D)	0646 0562 0574 0587 0635
STANDARD	0499 0648 0640 0645 0564 0565 0566 0593		
STAR SIGHT	0507	GLOBECAST	0553	1047
STAR TRAK	0516	GO VIDEO	0610	
STARCOM	0461 0518	HITACHI	0638 0629 0630	
STARGATE	0474 0632 0641 0607		
TANDY	0500	HUGHES NETWORK	0621 0641	
TELEVIEW	0474 0607 0580		
TEXSCAN	0499 0632 (A) 0638 (B) 0629 (C) 0630 (D)		
TIME WARNER	0529 0512 0506	JVC	0628 0612	
TOCOM	0464 0501 0513	KENWOOD	0598	
TOSHIBA	0486	LG	0607 0632 0641	
TV86	0487	LUXOR	0599	
UNIKA	0468 0469 0471	MACOM	0600	
UNITED CABLE	0461	MAGNAVOX	0576 0612 0639	
UNIVERSAL	0468 0469 0470	MICROYAL	1763	
VERIZON	0471 0502 0524	MITSUBISHI	0641 0632 0638	
VIDEO	0512 0529 0629 0630 0607		
VIDEO TECH	0550	MOTOROLA	0640 0646 0648 0618	
VIDEOTRON	0512	NEOSAT	1761	
VIDEOWAY	0504	NET	0548 0606	
VIEWSTAR	0475 0485 0487 0500	NORSTAT	0601	
VISIONETICS	1046	NOVAPLEX	0535	
ZENITH	0503 0525 0471	ORION	1762	
.....	0486 0521 0522 0523	PACE	0614 0615 0646	
ZENITH NETWORK	0527	PANASONIC	0626 0586 0596	

SAT

(IncludingSet-Top Boxes WebTV, DTV).
Use codes (A) (B) etc. if you have 2 or more of the same device.

ADTH	1033
AMPLICA	0575
BELL	0655 0628
BELL EXPRESSVU	0654 0647
.....	0655 0628
CENTURY	0547
CHANNEL MASTER	0577 0578 0579
CHAPPARAL	0560 0561
CHEYENNE	0561
COOLSAT	1036 0546
DIGIWAV	1034
DIRECTV	1049 1766 1767 1768 0622
..... 0632 0629 0623 0576 0586 0616 0613	
..... 0630 0634 0636 0638 0641 0652 0653	
..... 0657 0659 0607 0619 0537 0538 0539	
DISH NETWORK	0628 0655 (A)
..... 0647 (B) 0612 0654 0588 0589 0590	
DISHPRO	0588 0589 0590 0654
DRAKE	0562 0574 0587
DREAMBOX	0620
DX ANTENNA	0568 0582
ECHOSPHERE	0628
ECHOSTAR	0628 0655 (A) 0647 (B)
..... 0612 0654 0588 0589 0590	
EXPRESSVU	0654 0647 0655 0628
FORTEC STAR	0569 0555 0556
.....	0557 0558 0559
FUJITSU	0591 0592
GE	1769 1032 0636 0649 0637
.....	0622 0653 0650 0651 0652
GEMINI	0595

DVD/Blu-ray

ACESONIC	1119
ADVENT	0922
AFREEY	0417
AIWA	0414
AKAI	0395 0435 1105 1113
ALLEGRO	0245 0405
AMES	0431
AMW	0917 0918
ANABA	0961
APEX	0386 0390 0391 0392
.....	0424 0430 0436 0439 0445
..... 0457 0459 0938 0913 0401 0949	
ASPIRE	0933
ASTAR	1093
A-TREND	0393
AUDIOVOX	1390 0921 1117
AXION	0921
B & K	0978
BLAUPUNKT	0430
BLUESKY	0415 0445 1125
BLU-RAY	1411 1403 1399 1398
.....	1397 1396 1389 1129 0405
BODYSONIC	0417
BOSE	0672
BOSS	0911
BOSTON ACOUSTIC	1098
BRITANIA	1395
BROKSONIC	0932 0967 0394
CAVS	1115
CENTRIOS	0951 1067 1068
.....	0921 1054 1055 1059 1060
.....	1061 1064 1065 1062 0449
CHANGHONG	0401
CINEVISION	0405
CITECH	1073
CITIZEN	1073
CLASSIC	0431 1051 0401
COBY	0926 0946 0947 0916 0445
..... 0928 0894 1091 1101 1111 1112 1124	
CONCEPT	0430
CONIA	0445
CONTEL	1401
CRITERION	0448
CURTIS INTERNATIONAL	0929
.....	0928 0894
STARCHOICE	0640 0645 0627
STS	0568 0570 0571
SUPER GUIDE	0609
SYLVANIA	0581
TELSAT	0547
THOMSON	0636 0541
TOSHIBA	0641 0632 0638 0629 0630
..... 0607 0572 0624 0625 0631	
TVA	0551
ULTIMATE TV	0653 0659
UNIDEN	0633 0573 0611
UNITED	0597
VIDEO CIPHER II	0574
VIEWSAT	1037
VISIONTEC	0552
V-TECH	1039
WEB TV	0612 0585

EIGERVISION	1116
ELTA	0434 0435
EMERSON	0405 0940
.....	0899 0456 0458
ESA	0956
ESCIENT	1412
FARENHEIT	0960
FISHER	0416
FUNAI	0456 0458 0899
GE	0409 0430
GOLDSTAR	0405
GO-VIDEO	0431 0937 0971 0454
.....	0902 0901 0407 0426 0455
GPX	0936 0944
GRADIENTE	0415 1393 1394
GREENHILL	0430
HAAZ	0451 0452
HAIER	0935
HARMAN KARDON	0427
HD-DVD	1403 1399 1398 1397
.....	1396 1129 1110 0405
HITACHI	0404 0407 0428 0419 0387
HITEKER	0445
HUMAX	0912
ILO	0959 1070 1113
INFINITY	0417
INITIAL	0430 1070 1085 1109
INSIGNIA	0458 1401 1070 1066
.....	0456 0921 0430 0905 0907
..... 0405 1406 1407 1408 1413	
INTEGRA	0422
IRT	0894
JBL	0427
JVC	0398 0406 0408 0964
.....	0900 1072 0418 0923
JWIN	0390 0893 0895 1108
KAWASAKI	0945 0449
KENWOOD	0400 0429
KISS	0428
KLH	0430 0906 0386
KONKA	0410 0411 0412 0413 0905
KOSS	0415 0388
KXD	0894
LASONIC	1410 0451 0948
LENOXX	0931 0435 1087 1088
LG	1404 1400 0405 0972 0907
LINN	0443
LITEON	0982 0902 0898 0959 1069
LIQUIDVIDEO	0921
MAGNAVOX	1409 0398 0408 0458
..... 0979 0981 0980 0456 0915 0914 0969	
MARANTZ	0398 0405
.....	0408 0423 0981
MAXENT	0923 0903
MEDION	0911 0446 0903 0896 0959
MEMOREX	0394 0446
.....	1050 1118 1123
MERIDIAN	0398
MICROSOFT	0409 1100
MICROVISION	0911
MINTEK	0430
DISNEY	0458
MITSUBISHI	0430
MUSTEK	0431
MYRON & DAVIS	0962
NAD	1405 0405 0433
NAKAMICHI	0432
NEC	0405

NESA	0430 0962
NEXXTECH	1401 1066 0952 0954
.....	0955 0956 0934 1052 1054 1055
.....	1056 1057 1063 1064 0449 0949
NORCENT	0926 0982
.....	0927 0925 0928
ONKYO	0398 0422 0975
OPTIMUS	0404 0403
ORION	0394
ORITRON	0415 1060
PACIFIC	0912 0909
PANASONIC	1399 0396 0400 0974
.....	0970 0437 0950 0387
PHILCO	1392
PHILIPS	1129 0966 0914 1127 1128
.....	1126 0398 0408 0423 0755 0979
..... 0981 0980 0456 0458 0969 1096	
PHILIPS-MAGNAVOX	0398 0408
.....	0423 0979 0980
PIONEER	1398 1397 0403 0404
.....	0976 0977 0968 0909 1084
PIVA	1075
POLAROID	0385 0957
.....	0892 0949 1122
POLK AUDIO	0398 0408 0981
PORTLAND	0435 0952
POWER ACOUSTIK	1107
PROLINE	0415
PROSCAN	0409 0890
PROSONIC	0926
PROTRON	0925
PYLE	0910
RADIO SHACK	0449 0453 0919 0920
RCA	0409 0415 0430 0449
.....	0453 0920 0890 1123
REGENT	0931 1086
REOC	0451
RIO	0405
RJ TECHNOLOGY	1076 1097
ROSEN	0930
ROTEL	0406
SABA	0919
SAMSUNG	1389 1388 1387 0407
..... 0454 0942 0963 0891 1099 0455	
SAMPO	0417
SANSUI	0394 0967
SANYO	0904 0449 0416
SEARS	0394 0456
SEG	0428
COMCAST	0533
COX	0533
DIRECTV	1049 1766 1767 1768
DISH NETWORK	0655 0647
DREAMBOX	0620
ECHOSTAR	0655 0647
EMTEC	1385 1386
EXPRESSVU	0647 0655
FORTEC STAR	0569 0555 0556
HUGHES	0580
HUGHES NETWORK	0621 0580
HUMAX	0912
ILLICO	0506
ILO	0959
JVC	1072
LG	1400
SAMSUNG	1388 0891
LITEON	0959
MEDION	0959
MOTOROLA	0533
PANASONIC	0373 0387

SYLVANIA	0456 0458 1106 0899
SYMPHONIC	0456 0458 0899
TASCAM	0406
TEAC	0404 0449 0405
TECHNICS	0400
TECHWOOD	0433 1071 0408
TERAPIN	0943
TEVION	0388 0446 0447
.....	0448 0450 0451 0452
THETA DIGITAL	0404
TIVO	0912 0909
TOSHIBA	1110 1114 1120 0394
.....	0398 0973 0924 0983
TREDEX	0941
TRUTECH	1053 0971 1121
UNITED	0449
VENTURER	1120 0449
WHARFEDALE	0442 0417
WESTINGHOUSE	0987
WHITE WESTINGHOUSE	0458
X-BOX	0409
XENIUS	0388
YAMAHA ...	1402 0420 0979 0980 0408
YAMAKAWA	0438 0428 1058
ZENITH	0398 0405 0907

Laser Disc

DENON	0305
PIONEER	0305
PROSCAN	0308
RCA	0308
SANYO	0232
SONY	0323
ZENITH	0232

DVR

Use codes (A) (B) etc. if you have 2 or more of the same device.

AT&T	0373
BELL	0655 0628
BELL EXPRESSVU	0647 0655
CABLEVISION	0506
CHARTER	0533 0512
COMCAST	0533
COX	0533
DIRECTV	1049 1766 1767 1768
DISH NETWORK	0655 0647
DREAMBOX	0620
ECHOSTAR	0655 0647
EMTEC	1385 1386
EXPRESSVU	0647 0655
FORTEC STAR	0569 0555 0556
HUGHES	0580
HUGHES NETWORK	0621 0580
HUMAX	0912
ILLICO	0506
ILO	0959
JVC	1072
LG	1400
SAMSUNG	1388 0891
LITEON	0959
MEDION	0959
MOTOROLA	0533
PANASONIC	0373 0387

PANSAT	1035
PHILIPS	0371 (A) 0344 (B) 0345 (C)
.....	0621
PINNACLE	1040 1041 1042
PIONEER	0909 0977 0506
POLAROID	1122
PROSCAN	0653
RCA	0409 0653
RCN	0533
REPLAYTV	0373
ROGERS	0506
SAMSUNG	1388 0583
SCIENTIFIC ATLANTA	0506
SONIC BLUE	0373
SONY	0372 0657 0359
.....	0987 0988 0989 0659
TIME WARNER	0506
TiVo	0371 0372 0344 0345
.....	0657 0983 0912 0909
TOSHIBA	1114 0983 0973
ULTIMATE TV	0653 0659
VERIZON	0533
VIDEOTRON	0506
ZENITH	0656

DVD Recorders, RW, etc.

Use codes (A) (B) etc. if you have 2 or more of the same device.

ASTAR	0894
APEX	0938
ASPIRE	0933
BROKSONIC	0967
CENTRIOS	0951 1060 1061
COBY	0894
CYBERHOME	0939
EMERSON	0899
FUNAI	0456
GO-VIDEO	0431 0902 0901
HITACHI	0419 0387
HUMAX	0912
ILO	0959
INSIGNIA	0907
JVC	0900 1072
KXD	0894
LG	0907
LITEON	0902 0898 0959
MAGNAVOX ...	1409 0979 (A) 0980 (B)
MEDION	0903 0959
MEMOREX	1050 1118
MUSTEK	0431
ORITRON	1060
FORTEC STAR	0569 0555 0556
HUGHES	0580
HUGHES NETWORK	0621 0580
HUMAX	0912
ILLICO	0506
ILO	0959
JVC	1072
LG	1400
SAMSUNG	1388 0891
LITEON	0959
MEDION	0959
MOTOROLA	0533
PANASONIC	0373 0387

SYLVANIA	1106 0899
SYMPHONIC	0899
TOSHIBA	0973 0398 1114
TRUTECH	1053
YAMAHA	0979 (A) 0980 (B)
ZENITH	0907

Digital Picture Frames

AUDIOVOX	1729
COBY	1727
DIGITAL DECOR	1734
DIGITAL LIVING	1733
DYNEX	1729
INSIGNIA	1731
KODAK	1730 1720
MEMOREX	1726
NORCENT	1728
PANDIGITAL	1734 1723
PHOTOSHARE	1725
POLAROID	1734 1732 1722
ROYAL	1723
SMARTPARTS	1734 1721
TRUTECH	1724

Media Center PC

MCE	1100
MICROSOFT	1100
VISTA	