


USING THE ADAPTER TO INSTALL A MECHANICAL TIMER TO AN INTERMATIC ENCLOSURE

Insert two (2) screws from the top of the timer plate through the adapter.
Secure with nuts.
Please ensure that the motor wires are not pinched by the adapter plate.

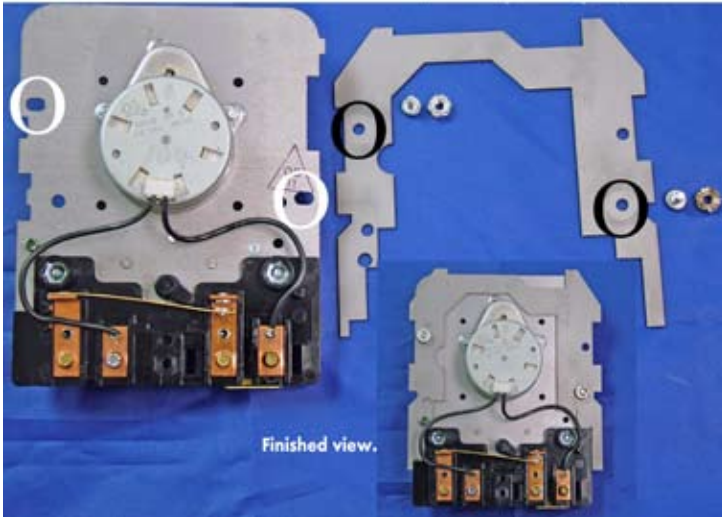

STEP 1

The original insulator that came with the timer must be replaced by the insulator provided with the adapter kit. For smaller metal enclosure, cut along the horizontal line (1 1/4") from bottom of the insulator provided with the adapter kit. For all other enclosures, install the unmodified insulator.

STEP 2

Attach the adapter to the mechanical timer.

Lift the motor wires and carefully insert the plate between the wires and the timer. Using the short screws, attach the adapter.

Using a flat-blade screwdriver, carefully tighten the screws to secure the timer to the adapter.

When correctly attached, the raised edge of the adapter should be on the LEFT side of the mechanical timer when viewed from the rear.

STEP 3

Slide the timer on an angle inside of the enclosure, gently resting it against the clip.

STEP 4

With the top of the adapter resting on the clip, push the top of the timer down until it snaps and locks.

Jasco Products Company LLC
10 E. Memorial Road
Oklahoma City, OK 73114.

VISIT:
www.jascopeproducts.com/timer

FOR TECHNICAL HELP
CALL 1-800-654-8483
OPTION 4