

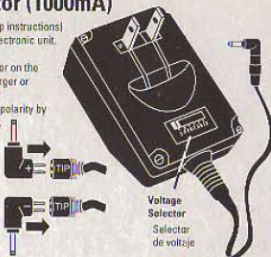


Universal AC Adaptor/Battery Eliminator (1000mA)

INSTRUCTIONS: (Before plugging adaptor into wall, please follow the step-by-step instructions)

- VOLTAGE:** Set voltage selector switch to match the required voltage for your electronic unit.
(Example: 4 x 1.5 volt batteries = 6 Volts)
- MILIAMP (mA):** Check the mA requirement of your unit in the units instructions or on the unit itself to verify it can be used with the AVZ3650 (1000mA) adaptor. **NOTE:** Larger or motorized units may require a higher mA rated adaptor.
- POLARITY:** Damage may occur if not set correctly. Determine your equipment's polarity by checking the area near its power input jack or by checking your owners manual.
Positive  Negative 
- DETACHABLE ADAPTOR PLUGS:** From the assortment of plugs included, select the correct plug size for your equipment.
If your equipment has positive polarity...
Insert the appropriate size plug into the "tip" receptacle on the power adaptor so the "+" sign on the plug is aligned with the word "tip."
If your equipment has negative polarity...
Insert the appropriate size plug into the "tip" receptacle on the power adaptor so the "-" sign on the plug is aligned with the word "tip."
- POWER:** Flip up the AC prongs and plug the adaptor into the AC outlet. Connect the adaptor plug into the DC input jack on your equipment.
Turn the equipment power on. If it does not work, disconnect.
Reverse the polarity of the plug and try again. If the equipment still does not work disconnect immediately.
- IMPORTANT:** If unit does not operate, IMMEDIATELY reverse the setting. **CAUTION:** User error in setting of polarity or voltage switching may damage electronic product. Do not use with units requiring more than 1000mA of current. Disconnect from AC outlet when not in use.




Tip of Adaptor Plug	Type of Battery (No. of Cells)	Voltage Per Cell	Approximate Power (mA)
1	AA or AAA or C or D or Ni	1.50V	1000
2	AA or AAA or C or D or Ni	3.00V	1000
3	AA or AAA or C or D or Ni	4.50V	1000
4	AA or AAA or C or D or Ni	6.00V	1000
5	AA or AAA or C or D or Ni	7.50V	1000
6	AA or AAA or C or D or Ni	9V	1000
1	9 VOLT WITH TDP CLIP	9V	1000
8	AAA or AA or C or D or Ni	12V	1000

90 DAY LIMITED WARRANTY: Jasco Products Company warrants this product to be free from manufacturing defects for a period of ninety days from the original date of consumer purchase. This warranty is limited to the repair or replacement of the product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state. If unit should prove defective within the warranty period, return product with dated proof of purchase to Jasco Products Company, 311 N.W. 122nd, Oklawaha City, OK 73144

Adaptador Universal de CA/Eliminador de Baterías (1000 mA)

INSTRUCCIONES: (Antes de conectar el adaptador a la pared, favor de seguir las instrucciones paso-a-paso).

- VOLTAJE:** Ajustar el selector de voltaje para que iguale al voltaje requerido por su unidad electrónica. (Ejemplo: 4 baterías de 1.5 V = 6 voltios).
- MILAMPERIOS (mA):** Verificar el requisito de mA de la unidad para determinar si puede ser usada con el adaptador AVZ3650 (1000 mA).
- POLARIDAD:** Determine la polaridad de su reproductor equipo comprobando en el área cerca del enchufe de energía o mirando su manual del propietario.
4. CLAVIJA DE ENTRADA: Del surtido de clavijas incluidas, seleccione la de tamaño correcto para su equipo.
Si su reproductor equipo tiene polaridad POSITIVA...
Inserte la clavija del tamaño adecuado en el receptáculo "tip" en el adaptador de energía de manera que el símbolo "+" en la clavija esté alineado con la palabra "tip".
Si su reproductor equipo tiene polaridad Negativa...
Inserte la clavija del tamaño adecuado en el receptáculo "tip" en el adaptador de energía de manera que el símbolo "-" en la clavija esté alineado con la palabra "tip".
- POTENCIA:** Conecte el enchufe adaptador al receptáculo de entrada de corriente directa de su equipo.
Prenda el equipo. Si no lo funciona, desconéctelo. Invierta la polaridad del enchufe y trate otra vez. Si el equipo aún no lo funciona, desconéctelo inmediatamente.
- IMPORTANTE:** Si la unidad no funciona, invertir **INMEDIATAMENTE** la polaridad. **PRECAUCIÓN:** El error del usuario al situar la polaridad o el voltaje pudiera dañar el equipo electrónico. No usar con unidades que requieren más de 1000 mA de corriente. Desconectar de la toma de CA cuando no está en uso.



GARANTÍA LIMITADA DE NOVENTA: Jasco Products Company garantiza este producto por un periodo de noventa días desde la fecha de la compra original, como libre de defectos e incidencias. Esta garantía está limitada a la reparación o reemplazo de este producto y no se extiende a daños colaterales o consecuentes en otros productos que puedan ser usados con esta unidad. Esta garantía es en vez de cualquier otra expresa o implícita. Algunos estados no permiten limitaciones o tiempo de limitada o permite el exclusion o limitaciones de daños incidentales o consecuentes, así el limitación del arriba no aplicará. Este limitado debe justificarse, y tíenve tiempo otro justificar que cambio del estado a estado. Si la unidad resulta defectuosa durante el periodo de garantía, devolvérsela prepagada a: