

Audio/Video and Game Switch

APPLICATION:


Eliminates disconnecting and reconnecting cables by allowing connection of up to 4 devices to television input jacks. Compatible with RCA type or S-video connections.

INSTRUCTIONS:

1. Connect each component to be used into the audio and video inputs of the AV23294 using an audio/video cable with RCA connectors. Note: the S-Video input can be used for the video signal using a video cable with S-Video connectors. All components used must be S-Video compatible and this type of connection used for all components.
2. Connect the Video OUT on the AV23294 to your TV using the RCA connectors or the S-Video connector depending on which type of jack was used in step 1 above. Note: For connection to TVs with only a single "F" jack input, use a GE branded RF Modulator.
3. Press switch 1, 2, 3 or 4 corresponding to the desired component for viewing on the TV.
4. If desired, connect headphone, earphone, or powered speakers equipped with 3.5mm plug to the audio output jack located on the front of the switch.

CAUTION:

Placing the switch on top of an electromagnetic source (ex: TV) may cause static on the TV.

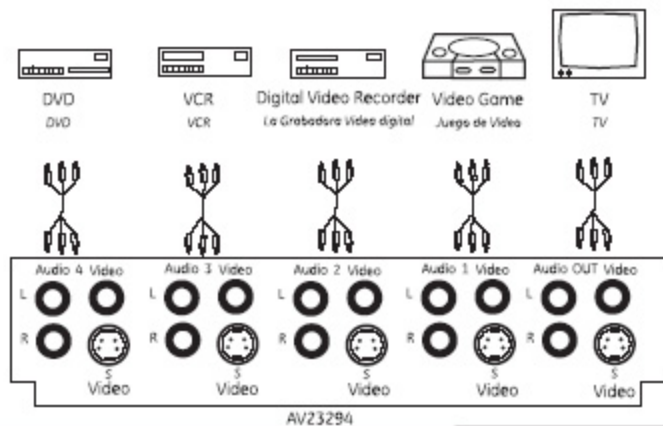

APLICACION:

Término desuniendo y conexión de los cables por permite conexión a 4 aparatos a los enchufes de la salida a la televisión.

INSTRUCCIONES

1. Conecta cada componente que quiere usar dentro las entradas audio/video del interruptor usando un cable audio/video con enchufes tipo RCA. Nota: Puede usar la entrada S-VHS por un señal video usando un cable video con enchufes tipo S-VHS. Todo los componentes que usan necesitan ser compatible con S-VHS y usan este tipo del conexión con todo los componentes.

2. Conecta la salida video del AV23294 a su TV usando los enchufes tipo RCA o enchufe tipo S-VHS dependemente al cual tipo de enchufe uso en paso 1 de arriba.
3. Deprimir el interruptor 1, 2, 3, o 4, correspondiente al deseo componente para vistando su TV.
4. Conecta el estereofónico, fónico de oreja, o parlantes poderoso equipo con una clavija 3.5mm a la clavija salida de audio en frente de interruptor.

PRECAUCION

Ponendo el interruptor arriba del origen electroimán (por ejemplo TV) puede causar estático en su TV.